



Erweiterungen und Änderungen der Software-Version 65

Funktionen nach Herstellern

Diese Auflistung stellt im Rahmen unserer Datenerweiterungen lediglich einen groben Überblick dar. Eine vollständige Auflistung jeder Modell-Erweiterung jedes Herstellers wäre an dieser Stelle viel zu umfangreich.

Erweiterte und überarbeitete Hersteller

AJP

Fehlercode	(Adventure, PR7 650 E4), (Enduro, PR5 250)
Parameter	(Adventure, PR7 650 E4), (Enduro, PR5 250)
Stellglied	
Grundeinstellung	
Codierung	
Service-Rückstellung	

Aprilia

Fehlercode	(RS, RS 125 E5), (Shiver, Shiver SL 900 Navi), (SXR, SXR 160 E5), (SXR, SXR 50 E5)
Parameter	(Dorsoduro, Dorsoduro 900), (RS, RS 125 E5), (RSV, RSV 4 1100 Factory), (Shiver, Shiver SL 900 Navi), (SXR, SXR 160 E5), (SXR, SXR 50 E5)
Stellglied	(RS, RS 125 E5), (SXR, SXR 160 E5), (SXR, SXR 50 E5)
Grundeinstellung	Fahrwerk anlernen ((RSV, RSV 4 1100 Factory), (Tuono, Tuono 1100 Factory)) Drosselklappe anlernen ((RS, RS 125 E5)) Alle Motorlernwerte zurücksetzen ((SXR, SXR 50 E5), (SXR, SXR 160 E5), (RS, RS 125 E5)) Motorsteuergerät anlernen ((RS, RS 125 E5))
Codierung	
Service-Rückstellung	(Tuono, Tuono V4 1100)



Motorcycle-Diagnose

Benelli

Fehlercode	(BN, BN125), (BN, BN251), (BN, BN302), (BN, BN302 R), (BN, BN600 GT), (BN, BN600 R), (BN, BN600i), (Classic, Imperiale 400), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 502 C), (Naked, 752 S), (TNT, TNT 125), (Tornado, Tornado Naked T125), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X)
Parameter	(BN, BN125), (BN, BN251), (BN, BN302), (BN, BN302 R), (BN, BN600 GT), (BN, BN600 R), (BN, BN600i), (Classic, Imperiale 400), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 502 C), (Naked, 752 S), (TNT, TNT 125), (Tornado, Tornado Naked T125), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X)
Stellglied	(BN, BN251), (BN, BN302), (BN, BN302 R), (Classic, Imperiale 400), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 502 C), (Naked, 752 S), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X)
Grundeinstellung	Bremssystem entlüften ((BN, BN251), (BN, BN302), (BN, BN302 R), (Leoncino, Leoncino 250), (Leoncino, Leoncino 500), (Naked, 752 S), (Naked, 502 C), (Touring, TRK 251), (Touring, TRK 502), (Touring, TRK 502 X), (Classic, Imperiale 400))
Codierung	
Service-Rückstellung	

BMW

Fehlercode	(C 650, C 650 Sport), (F 700, F 700 GS), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (G, G 310 GS), (G, G 310 R), (G, G 650 GS Sertao), (HP 2, HP 2 Enduro), (K 1, K 1 - 4V), (K 100, K 100 RS 4V), (K 1100, K 1100 LT), (K 1100, K 1100 RS), (K 1200, K 1200 GT), (K 1200, K 1200 R), (K 1200, K 1200 RS), (K 1200, K 1200 S), (K 1600, K 1600 B), (K 1600, K 1600 GT), (K 1600, K 1600 GTL), (nineT, R nineT), (R 1100, R 1100 S), (R 1150, R 1150 GS), (R 1150, R 1150 GS Adventure), (R 1150, R 1150 R), (R 1150, R 1150 R Rockster), (R 1150, R 1150 RS), (R 1150, R 1150 RT), (R 1200, R 1200 C), (R 1200, R 1200 CL), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (R 1200, R 1200 S), (R 1200, R 1200 ST), (R 1250, R 1250 GS), (R 1250, R 1250 GS Adventure), (R 1250, R 1250 RT), (R 850, R 850 R), (R 850, R 850 RT), (S 1000, S 1000 R), (S 1000, S 1000 RR), (S 1000, S 1000 XR)
Parameter	(C 650, C 650 Sport), (F 700, F 700 GS), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (G, G 310 GS), (G, G 310 R), (G, G 650 GS Sertao), (HP 2, HP 2 Enduro), (K 1200, K 1200 GT), (K 1200, K 1200 R), (K 1200, K 1200 RS), (K 1200, K 1200 S), (K 1600, K 1600 B), (K 1600, K 1600 GT), (K 1600, K 1600 GTL), (nineT, R nineT), (R 1100, R 1100 S), (R 1150, R 1150 GS), (R 1150, R 1150 GS Adventure), (R 1150, R 1150 R), (R 1150, R 1150 R Rockster), (R 1150, R 1150 RS), (R 1150, R 1150 RT), (R 1200, R 1200 C), (R 1200, R 1200 CL), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (R 1200, R 1200 S), (R 1200, R 1200 ST), (R 1250, R 1250 GS), (R 1250, R 1250 GS Adventure), (R 1250, R 1250 RT), (R 850, R 850 R), (R 850, R 850 RT), (S 1000, S 1000 R), (S 1000, S 1000 RR), (S 1000, S 1000 XR)
Stellglied	(C 650, C 650 Sport), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (G, G 310 GS), (G, G 310 R), (G, G 650 GS Sertao), (nineT, R nineT), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (S 1000, S 1000 R), (S 1000, S 1000 RR)



Motorcycle-Diagnose

Grundeinstellung

ABS-Hydraulikeinheit hinten entlüften ((F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 700, F 700 GS), (G, G 310 R), (S 1000, S 1000 RR), (S 1000, S 1000 R), (F 800, F 800 R), (S 1000, S 1000 XR), (nineT, R nineT), (K 1600, K 1600 GT), (G, G 310 GS), (C 650, C 650 GT), (G, G 650 GS Sertao), (K 1600, K 1600 GTL), (K 1600, K 1600 B))

CAN-Bus aktivieren ((F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure))

Leerlaufregler-Adaption ((F 800, F 800 S), (F 800, F 800 ST), (F 800, F 800 GS), (F 800, F 800 R), (F 800, F 800 GT), (F 800, F 800 GS Adventure), (F 650, F 650 GS))

Dynamische Fahrwerksregelung anlernen ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure))

Windschild anlernen ((R 1200, R 1200 RT))

Lernwerte Drosselklappe zurücksetzen ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS))

Drosselklappensensor anlernen ((R 1100, R 1100 S), (R 1150, R 1150 GS), (R 1150, R 1150 GS Adventure), (K 1200, K 1200 RS), (R 1200, R 1200 C), (K 1, K 1 - 4V), (K 100, K 100 RS 4V), (K 1100, K 1100 LT), (K 1100, K 1100 RS))

Drosselklappe anlernen ((C 650, C 650 Sport))

ABS-Hydraulikeinheit vorne entlüften ((F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 700, F 700 GS), (G, G 310 R), (S 1000, S 1000 RR), (S 1000, S 1000 R), (F 800, F 800 R), (S 1000, S 1000 XR), (nineT, R nineT), (K 1600, K 1600 GT), (G, G 310 GS), (G, G 650 GS Sertao), (K 1600, K 1600 GTL), (K 1600, K 1600 B))

Lernwerte zurücksetzen ((F 700, F 700 GS), (F 800, F 800 GT), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 R))

Fahrzeugniveausensor dynamische Fahrwerksregelung anlernen ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure))

RDC-Sensoren anlernen ((R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 RT), (F 800, F 800 R), (F 700, F 700 GS), (F 800, F 800 GS))

Codierung

Service-Rückstellung

(C 600, C 600 Sport), (C 650, C 650 GT), (C evolution, C evolution), (F 650, F 650 GS), (F 700, F 700 GS), (F 800, F 800 GS), (F 800, F 800 GS Adventure), (F 800, F 800 GT), (F 800, F 800 R), (F 800, F 800 S), (F 800, F 800 ST), (G, G 650 Xmoto), (HP 2, HP 2 Enduro), (HP 2, HP 2 Megamoto), (HP 2, HP 2 Sport), (K 1200, K 1200 GT), (K 1200, K 1200 R), (K 1200, K 1200 RS), (K 1200, K 1200 S), (K 1300, K 1300 GT), (K 1300, K 1300 R), (K 1300, K 1300 S), (K 1600, K 1600 GT), (K 1600, K 1600 GTL), (nineT, R nineT), (R 1200, R 1200 GS), (R 1200, R 1200 GS Adventure), (R 1200, R 1200 R), (R 1200, R 1200 RS), (R 1200, R 1200 RT), (R 1200, R 1200 S), (R 1200, R 1200 ST), (S 1000, S 1000 R), (S 1000, S 1000 RR), (S 1000, S 1000 RR HP4), (S 1000, S 1000 XR)

Brixton

Fehlercode

(BX, BX 125), (BX, BX 125 Haycroft), (Cromwell, Cromwell 125), (Cromwell, Cromwell 250), (Crossfire, Crossfire 125 XS), (Crossfire, Crossfire 500), (Felsberg, Felsberg 125), (Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 250), (Rayburn, Rayburn 125), (Sunray, Sunray 125)

Parameter

(BX, BX 125), (BX, BX 125 Haycroft), (Cromwell, Cromwell 125), (Cromwell, Cromwell 250), (Crossfire, Crossfire 125 XS), (Crossfire, Crossfire 500), (Felsberg, Felsberg 125), (Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 250), (Rayburn, Rayburn 125), (Sunray, Sunray 125)



Motorcycle-Diagnose

- | **Stellglied** (Cromwell, Cromwell 125), (Cromwell, Cromwell 250), (Crossfire, Crossfire 500), (Felsberg, Felsberg 125), (Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 250), (Sunray, Sunray 125)
- | **Grundeinstellung** Bremssystem entlüften ((Felsberg, Felsberg 125 XC), (Felsberg, Felsberg 125), (Felsberg, Felsberg 250), (Crossfire, Crossfire 500), (Sunray, Sunray 125), (Cromwell, Cromwell 125), (Cromwell, Cromwell 250))
- | **Codierung**
- | **Service-Rückstellung**

CFMOTO

- | **Fehlercode** (250, 250 NK), (400, 400 NK), (650, 650 MT)
- | **Parameter** (250, 250 NK), (400, 400 NK), (650, 650 MT)
- | **Stellglied** (250, 250 NK), (400, 400 NK), (650, 650 MT)
- | **Grundeinstellung**
- | **Codierung**
- | **Service-Rückstellung**

Ducati

- | **Fehlercode**
- | **Parameter**
- | **Stellglied**
- | **Grundeinstellung**
- | **Codierung** Schaltautomat de-/aktivieren ((Superbike, Panigale V2))
Diebstahlwarnanlage de-/aktivieren ((Superbike, Panigale V2), (Scrambler, Scrambler 1100))
Tagfahrlicht de-/aktivieren ((Superbike, Panigale V2), (Scrambler, Scrambler 1100))
Heizgriffe de-/aktivieren ((Superbike, Panigale V2), (Scrambler, Scrambler 1100))
- | **Service-Rückstellung** (Hypermotard, 950 Hypermotard SP), (Monster, M 1000 DS), (Monster, M 1000 S4 R), (Monster, M 800), (Monster, M S4), (Multistrada, MTS 1000), (Sport Touring, ST 4), (Sport Touring, ST 4 S), (Sport Touring, ST 4 S ABS), (Super Sport, 1000 SS DS), (Superbike, 1199 Panigale), (Superbike, 1199 Panigale R), (Superbike, 1199 Panigale S)



Motorcycle-Diagnose

F.B Mondial

Fehlercode	(125, HPS 125), (125, HPS 125 E5), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS), (300, HPS 300), (300, Sport Classic 300)
Parameter	(125, HPS 125), (125, HPS 125 E5), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS), (300, HPS 300), (300, Sport Classic 300)
Stellglied	(125, HPS 125), (125, HPS 125 E5), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS), (300, HPS 300), (300, Sport Classic 300)
Grundeinstellung	Bremssystem entlüften ((300, HPS 300), (300, Sport Classic 300)) Drosselklappe anlernen ((125, HPS 125), (125, SMT 125), (125, SMX 125 Enduro), (125, SMX 125 Motard), (125, Sport Classic 125), (125, Sport Classic 125 ABS)) ABS-Hydraulikeinheit entlüften ((125, HPS 125 E5), (125, Sport Classic 125 ABS))
Codierung	
Service-Rückstellung	

Fantic

Fehlercode	(Caballero, Flat Track 125), (Caballero, Scrambler 125)
Parameter	(Caballero, Flat Track 125), (Caballero, Scrambler 125)
Stellglied	(Caballero, Flat Track 125), (Caballero, Scrambler 125)
Grundeinstellung	
Codierung	
Service-Rückstellung	

Generic

Fehlercode	(125, TR 125 Enduro), (125, TR 125 Supermoto)
Parameter	(125, TR 125 Enduro), (125, TR 125 Supermoto)
Stellglied	
Grundeinstellung	



Motorcycle-Diagnose

- | Codierung
- | Service-Rückstellung

Harley-Davidson

- | **Fehlercode** (CVO, Twin Cam 110), (Dyna, Twin Cam 103), (Dyna, Twin Cam 88), (Dyna, Twin Cam 96), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Softail, Twin Cam 103), (Softail, Twin Cam 88), (Softail, Twin Cam 96), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (Touring, Twin Cam 103), (Touring, Twin Cam 88), (Touring, Twin Cam 96), (Trike, 1745)
- | **Parameter** (CVO, Twin Cam 110), (Dyna, Twin Cam 103), (Dyna, Twin Cam 88), (Dyna, Twin Cam 96), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Softail, Twin Cam 103), (Softail, Twin Cam 88), (Softail, Twin Cam 96), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (Touring, Twin Cam 103), (Touring, Twin Cam 88), (Touring, Twin Cam 96)
- | **Stellglied** (CVO, Twin Cam 110), (Dyna, Twin Cam 103), (Dyna, Twin Cam 88), (Dyna, Twin Cam 96), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Softail, Twin Cam 103), (Softail, Twin Cam 88), (Softail, Twin Cam 96), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (Touring, Twin Cam 103), (Touring, Twin Cam 88), (Touring, Twin Cam 96)
- | **Grundeinstellung**

Lernwerte Lambdasonde zurücksetzen ((VRSC, 1250), (Sportster, 883), (Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

ABS-Hydraulikeinheit hinten entlüften ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Alle Motorlernwerte zurücksetzen ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

ABS-Hydraulikeinheit vorne entlüften ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))



Motorcycle-Diagnose

Codierung

Leerlaufdrehzahl codieren ((Softail, Twin Cam 88), (Dyna, Twin Cam 88), (Touring, Twin Cam 88))

Abgasklappe deaktivieren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Geschwindigkeits-Regelanlage aktivieren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Geschwindigkeits-Regelanlage deaktivieren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Abgasklappe aktivieren ((Softail, Twin Cam 96), (Softail, Twin Cam 103), (Softail, Milwaukee-Eight 107), (Softail, Milwaukee-Eight 114), (Dyna, Twin Cam 96), (Dyna, Twin Cam 103), (Touring, Twin Cam 96), (Touring, Twin Cam 103), (Touring, Milwaukee-Eight 107), (Touring, Milwaukee-Eight 114), (CVO, Twin Cam 110))

Service-Rückstellung

Hisun Quad

Fehlercode

(ATV, Tactic 550)

Parameter

(ATV, Tactic 550)

Stellglied

Grundeinstellung

Codierung

Service-Rückstellung

Hyosung

Fehlercode

(GT, GT 650i /iR), (ST, ST 700i)

Parameter

(GT, GT 650i /iR), (ST, ST 700i)

Stellglied

Grundeinstellung

Codierung

Service-Rückstellung



Motorcycle-Diagnose

Kawasaki

Fehlercode	(ER, ER-6f), (ER, ER-6n), (GTR, GTR-1400), (Ninja, Ninja 1000 SX), (Versys, Versys-1000), (Versys, Versys-650), (Z, Z-1000), (Z, Z-1000 SX), (Z, Z-750), (Z, Z-750 R), (Z, Z-800), (ZX, ZX-10 R), (ZZR, ZZR-1400)
Parameter	(ER, ER-6f), (ER, ER-6n), (Ninja, Ninja 1000 SX), (Versys, Versys-1000), (Z, Z-1000), (Z, Z-750), (ZX, ZX-10 R)
Stellglied	(ER, ER-6f), (ER, ER-6n), (Ninja, Ninja 1000 SX), (Versys, Versys-1000), (ZX, ZX-10 R)
Grundeinstellung	ABS-Hydraulikeinheit hinten entlüften ((Ninja, Ninja 1000 SX), (Versys, Versys-1000)) ABS-Hydraulikeinheit vorne entlüften ((Ninja, Ninja 1000 SX), (Versys, Versys-1000))
Codierung	
Service-Rückstellung	(H2, H2R), (H2, Ninja H2 SX), (H2, ZH2), (H2, ZH2 SE), (Ninja, Ninja 1000 SX), (Ninja, Ninja 650), (Versys, Versys-1000), (Versys, Versys-650), (Z, Z-400), (Z, Z-650), (Z, Z-900)

Keeway

Fehlercode	(125, Cityblade 125), (125, K-Light 125), (125, Logik 125), (125, RKF 125), (125, RKR 125), (125, RKS 125), (125, RKS 125 Sport), (125, RKV 125), (125, Superlight 125), (125, TX 125 Motard), (125, Vieste 125), (125, Zahara 125), (300, Vieste 300), (50, F-ACT Evo 50), (600, KR6 600)
Parameter	(125, Cityblade 125), (125, K-Light 125), (125, Logik 125), (125, RKF 125), (125, RKR 125), (125, RKS 125), (125, RKS 125 Sport), (125, RKV 125), (125, Superlight 125), (125, TX 125 Motard), (125, Vieste 125), (125, Zahara 125), (300, Vieste 300), (50, F-ACT Evo 50), (600, KR6 600)
Stellglied	(300, Vieste 300)
Grundeinstellung	Bremssystem entlüften ((300, Vieste 300))
Codierung	
Service-Rückstellung	

KSR Motors

Fehlercode	(125, GRS 125), (125, TR 125)
Parameter	(125, TR 125)
Stellglied	
Grundeinstellung	



Motorcycle-Diagnose

| Codierung

| Service-Rückstellung

KTM

- | Fehlercode (1190, 1190 RC8), (250, 250 EXC), (300, 300 EXC), (390, 390 Adventure), (890, 890 Duke R)
- | Parameter (250, 250 EXC), (300, 300 EXC), (390, 390 Adventure), (890, 890 Duke R)
- | Stellglied (250, 250 EXC), (300, 300 EXC), (390, 390 Adventure), (890, 890 Duke R)
- | Grundeinstellung Gangstellantrieb Getriebe in Neutralposition bringen ((1290, 1290 Super Duke GT))
Lernwerte Motor zurücksetzen ((1290, 1290 Super Duke GT), (300, 300 EXC), (250, 250 EXC))
Ölpumpe entlüften ((300, 300 EXC), (250, 250 EXC))
Bremsssystem entlüften ((390, 390 Adventure), (890, 890 Duke R))
ABS-Hydraulikeinheit entlüften ((990, 990 Supermoto))
Neigungssensor anlernen ((390, 390 Adventure), (890, 890 Duke R))

| Codierung

| Service-Rückstellung

Kymco

- | Fehlercode (Agility, Agility 125 +16), (Agility, Agility 125 RS), (Agility, Agility Carry 125), (Agility, Agility Carry 50), (Agility, Agility R12 125), (Agility, Agility R16 125), (Agility, Agility R16 Plus 125), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (Agility, Agility R16 Plus 50), (AK, AK 550i ABS), (Downtown, Downtown 350i), (DT, DT X360), (Like, Like 125), (Like, Like 125 Sport), (Like, Like 150), (Like, Like 50), (People, People GTI 125), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (People, People S 50), (Super 8, Super 8 50), (Visar, Visar 125), (X-Town, X-Town 300), (X-Town, X-Town 300 City)
- | Parameter (Agility, Agility 125 +16), (Agility, Agility 125 RS), (Agility, Agility Carry 125), (Agility, Agility Carry 50), (Agility, Agility R12 125), (Agility, Agility R16 125), (Agility, Agility R16 Plus 125), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (Agility, Agility R16 Plus 50), (AK, AK 550i ABS), (Downtown, Downtown 350i), (DT, DT X360), (Like, Like 125), (Like, Like 125 Sport), (Like, Like 150), (Like, Like 50), (People, People GTI 125), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (People, People S 50), (Super 8, Super 8 50), (Visar, Visar 125), (X-Town, X-Town 300), (X-Town, X-Town 300 City)
- | Stellglied



Motorcycle-Diagnose

Grundeinstellung

Lernwerte Leerlaufregler zurücksetzen ((Agility, Agility 125 +16), (Agility, Agility 125 RS), (Agility, Agility Carry 125), (Agility, Agility R12 125), (Agility, Agility R16 125), (Agility, Agility R16 Plus 125), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 50), (Agility, Agility Carry 50), (Like, Like 125), (Like, Like 125 Sport), (Like, Like 150), (Like, Like 50), (People, People GTI 125), (People, People GTI 300), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 50))

ABS-Hydraulikeinheit hinten entlüften ((Downtown, Downtown 350i), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (AK, AK 550i ABS), (DT, DT X360), (Like, Like 150), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (X-Town, X-Town 300), (X-Town, X-Town 300 City))

ABS-Hydraulikeinheit vorne entlüften ((Downtown, Downtown 350i), (Agility, Agility R16 Plus 150), (Agility, Agility R16 Plus 200), (Agility, Agility R16 Plus 300), (AK, AK 550i ABS), (DT, DT X360), (Like, Like 150), (People, People GTI 300), (People, People One 125i), (People, People One 150i), (People, People S 125), (People, People S 150), (People, People S 200), (People, People S 300), (X-Town, X-Town 300), (X-Town, X-Town 300 City))

Codierung

Service-Rückstellung

Mash

Fehlercode

(125, Black Seven), (250, Two Fifty), (400, Five Hundred)

Parameter

(125, Black Seven), (250, Two Fifty), (400, Five Hundred)

Stellglied

Grundeinstellung

Codierung

Service-Rückstellung

MH

Fehlercode

(125, Bogga 125), (125, Bogga Rocker 125), (125, MHX 125), (125, NKR 125), (125, Revenge Bravo Edition 125), (125, Revenge Classic 125), (125, RYX125), (125, Vince 125)

Parameter

(125, Bogga 125), (125, Bogga Rocker 125), (125, MHX 125), (125, RYX125), (125, Vince 125)

Stellglied

Grundeinstellung

Codierung

Service-Rückstellung



Motorcycle-Diagnose

Moto Guzzi

- | Fehlercode
- | Parameter
- | Stellglied
- | Grundeinstellung
- | Codierung
- | Service-Rückstellung (V85, V85 850), (V85, V85 850 Enduro E5)

MV Agusta

- | Fehlercode (Brutale, Brutale 1090), (Brutale, Brutale 1090 R), (Brutale, Brutale 1090 RR), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 SCS), (Brutale, Brutale Dragster 800 Rosso), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800), (F3, F3 800 RC), (F3, F3 800 RR), (F4, F4 1000 R), (Rivale, Rivale 800), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso)
- | Parameter (Brutale, Brutale 1090), (Brutale, Brutale 1090 R), (Brutale, Brutale 1090 RR), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 SCS), (Brutale, Brutale Dragster 800 Rosso), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800), (F3, F3 800 RC), (F3, F3 800 RR), (F4, F4 1000 R), (Rivale, Rivale 800), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso)
- | Stellglied (Brutale, Brutale 1090), (Brutale, Brutale 1090 R), (Brutale, Brutale 1090 RR), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 SCS), (Brutale, Brutale Dragster 800 Rosso), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800), (F3, F3 800 RC), (F3, F3 800 RR), (F4, F4 1000 R), (Rivale, Rivale 800), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso)
- | Grundeinstellung Lernwerte Drosselklappe zurücksetzen ((F3, F3 675), (F3, F3 800), (F4, F4 1000 R), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 Dragster RC), (F3, F3 675 RC), (F3, F3 800 RC), (Turismo, Turismo Veloce 800 Lusso), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800



Motorcycle-Diagnose

Dragster RR RVS), (Brutale, Brutale Dragster 800 Rosso), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 SCS), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso))

Abgasklappe anlernen ((F3, F3 675), (F3, F3 800), (F4, F4 1000 R), (Brutale, Brutale 800 Dragster RC), (F3, F3 675 RC), (F3, F3 800 RC), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 SCS), (Stradale, Stradale Superveloce 800))

Lernwerte Motor zurücksetzen ((F3, F3 800), (Rivale, Rivale 800), (F3, F3 675), (F3, F3 675 RC), (F3, F3 800 RC), (Turismo, Turismo Veloce 800 Lusso), (Stradale, Stradale Superveloce 800), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 RC SCS), (Turismo, Turismo Veloce 800 Rosso))

Alle Motorlernwerte zurücksetzen ((F3, F3 675), (F4, F4 1000 R), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale Dragster 800 Rosso), (Brutale, Brutale 800 Dragster RR SCS), (Brutale, Brutale 800 RC SCS), (Brutale, Brutale 800 Dragster RR), (Brutale, Brutale 800 Rosso), (Brutale, Brutale 800 SCS))

Drosselklappe anlernen ((Rivale, Rivale 800))

| Codierung

| Service-Rückstellung

(Brutale, Brutale 675), (Brutale, Brutale 800), (Brutale, Brutale 800 Dragster), (Brutale, Brutale 800 Dragster RC), (Brutale, Brutale 800 Dragster RR RVS), (Brutale, Brutale 800 RR), (Brutale, Brutale 800 RR SCS), (Brutale, Brutale Dragster 800 Rosso), (Turismo, Turismo Veloce 800 Base), (Turismo, Turismo Veloce 800 Lusso RC), (Turismo, Turismo Veloce 800 Lusso SCS), (Turismo, Turismo Veloce 800 Rosso)

Piaggio

| Fehlercode

(MP 3, MP 3 300 HPE E4), (MP 3, MP 3 400 E5), (Zip, Zip 50 E5)

| Parameter

(MP 3, MP 3 300 HPE E4), (MP 3, MP 3 400 E5), (Zip, Zip 50 E5)

| Stellglied

(MP 3, MP 3 300 HPE E4), (MP 3, MP 3 400 E5), (Zip, Zip 50 E5)

| Grundeinstellung

ABS-Hydraulikeinheit hinten entlüften ((MP 3, MP 3 400 E5))

ABS-Hydraulikeinheit vorne entlüften ((MP 3, MP 3 400 E5))

Alle Motorlernwerte zurücksetzen ((MP 3, MP 3 400 E5), (Zip, Zip 50 E5))

Fahrwerksparameter zurücksetzen ((MP 3, MP 3 300 HPE E4))

| Codierung

| Service-Rückstellung



Motorcycle-Diagnose

Quadro

- | Fehlercode (Qooder, Qooder), (Quadro, Quadro 3), (Quadro, Quadro 350 S), (Quadro, Quadro 4), (Quadro, Quadro S), (QV, QV3)
- | Parameter (Qooder, Qooder), (Quadro, Quadro 3), (Quadro, Quadro 350 S), (Quadro, Quadro 4), (Quadro, Quadro S), (QV, QV3)
- | Stellglied
- | Grundeinstellung
- | Codierung
- | Service-Rückstellung

Shineray

- | Fehlercode (XY, XY 400)
- | Parameter (XY, XY 400)
- | Stellglied
- | Grundeinstellung
- | Codierung
- | Service-Rückstellung

Stels

- | Fehlercode (Trigger, Trigger 125)
- | Parameter (Trigger, Trigger 125)
- | Stellglied
- | Grundeinstellung
- | Codierung
- | Service-Rückstellung



Motorcycle-Diagnose

Suzuki

Fehlercode	(DL, DL-1050), (GSX, GSX-1300 Hayabusa)
Parameter	(DL, DL-1050), (GSX, GSX-1300 Hayabusa)
Stellglied	(GSX, GSX-1300 Hayabusa)
Grundeinstellung	Lernwerte Leerlaufregler zurücksetzen ((GSX, GSX-1300 Hayabusa)) Lernwerte Drosselklappe zurücksetzen ((GSX, GSX-1300 Hayabusa)) ABS-Hydraulikeinheit hinten entlüften ((DL, DL-1050)) Steuergerät zurücksetzen ((GSX, GSX-1300 Hayabusa)) ABS-Hydraulikeinheit vorne entlüften ((DL, DL-1050))
Codierung	
Service-Rückstellung	

SWM

Fehlercode	(Ace of Spades, Ace of Spades 125), (Ace of Spades, Ace of Spades 440), (Outlaw, Outlaw 125), (Outlaw, Outlaw 440), (RS, RS 125 R), (RS, RS 300 R), (RS, RS 500 R), (SMR, SMR 125 R), (Superdual, Superdual 650)
Parameter	(Ace of Spades, Ace of Spades 125), (Ace of Spades, Ace of Spades 440), (Outlaw, Outlaw 125), (Outlaw, Outlaw 440), (RS, RS 125 R), (RS, RS 300 R), (RS, RS 500 R), (SMR, SMR 125 R), (Superdual, Superdual 650)
Stellglied	
Grundeinstellung	
Codierung	
Service-Rückstellung	

Triumph

Fehlercode	(ab 2016, 1. Motor digital)
Parameter	(ab 2016, 1. Motor digital)
Stellglied	
Grundeinstellung	



Motorcycle-Diagnose

| Codierung

| Service-Rückstellung

Verve Moto

| Fehlercode (Classic, Classic S 125), (Classic, Classic S 250), (Tracker, Tracker 250)

| Parameter (Classic, Classic S 125), (Classic, Classic S 250), (Tracker, Tracker 250)

| Stellglied

| Grundeinstellung

| Codierung

| Service-Rückstellung

Vespa

| Fehlercode (946, 946 125 E5), (946, 946 150 E5), (GTS, GTS 300 ie), (GTV, GTV 300 E4)

| Parameter (946, 946 125 E5), (946, 946 150 E5), (GTS, GTS 300 ie), (GTV, GTV 300 E4)

| Stellglied (946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4)

| Grundeinstellung
Drosselklappe anlernen ((946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4))
ABS-Hydraulikeinheit vorne entlüften ((GTV, GTV 300 E4))
Alle Motorlernwerte zurücksetzen ((946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4))
ABS-Hydraulikeinheit hinten entlüften ((GTV, GTV 300 E4))
Motorsteuergerät anlernen ((946, 946 125 E5), (946, 946 150 E5), (GTV, GTV 300 E4))

| Codierung

| Service-Rückstellung

Wottan

| Fehlercode (Storm, Storm 125)

| Parameter (Storm, Storm 125)

| Stellglied

| Grundeinstellung



Motorcycle-Diagnose

| Codierung

| Service-Rückstellung

Yamaha

| **Fehlercode** (MT, MT 03), (MT, MT-07 E5), (MT, MT-09 E5), (MT, MT-10), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (Tenere, Tenere 700 E5), (Tracer, Tracer 7 E5), (Tracer, Tracer 9 GT E5), (YZF, YZF-R3)

| **Parameter** (MT, MT 03), (MT, MT-07 E5), (MT, MT-09 E5), (MT, MT-10), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (Tenere, Tenere 700 E5), (Tracer, Tracer 7 E5), (Tracer, Tracer 9 GT E5), (YZF, YZF-R3)

| **Stellglied** (MT, MT 03), (MT, MT-07 E5), (MT, MT-09 E5), (MT, MT-10), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (Tenere, Tenere 700 E5), (Tracer, Tracer 7 E5), (Tracer, Tracer 9 GT E5), (YZF, YZF-R3)

| **Grundeinstellung**

Lernwerte Leerlaufregler zurücksetzen ((YZF, YZF-R1), (Tenere, Tenere 700 E5), (Tracer, Tracer 9 GT E5), (Tracer, Tracer 7 E5), (MT, MT-07 E5), (MT, MT-09 E5), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (YZF, YZF-R3), (MT, MT 03), (MT, MT-10))

Lernwerte Motor zurücksetzen ((Tenere, Tenere 700 E5), (Tracer, Tracer 9 GT E5), (Tracer, Tracer 7 E5), (MT, MT-07 E5), (MT, MT-09 E5), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (YZF, YZF-R3), (MT, MT 03), (MT, MT-10))

ABS-Hydraulikeinheit entlüften ((Tenere, Tenere 700 E5), (Tracer, Tracer 9 GT E5), (Tracer, Tracer 7 E5), (MT, MT-07 E5), (MT, MT-09 E5), (N-Max, N-MAX 125 E5), (N-Max, N-MAX 300 E5), (YZF, YZF-R3), (MT, MT 03))

| Codierung

| Service-Rückstellung